

SPARE SWITCHES FOR CONTOUR GENERATION 2

SW-CG1	ON/OFF
SW-CG2	MOMENTARY ON/OFF
SW-CG3	ON/OFF/ON
SW-CG4	MOMENTARY ON/OFF/MOMENTARY ON
SW-CG5	ON/ON